

# American Lumber Standard Committee, Incorporated

J.G. McGowin, Chairman  
H.R. Friesen, Vice Chairman  
S.R. Ingram, Treasurer  
T.D. Searles, President


P.O. Box 210  
Germantown, Maryland 20875-0210  
Telephone: (301) 972-1700  
Fax: (301) 540-8004  
E-Mail: [alsc@alsc.org](mailto:alsc@alsc.org)

## ACCREDITED AGENCIES FOR SUPERVISORY AND LOT INSPECTION OF PRESSURE TREATED WOOD PRODUCTS January, 2000

*(this list supercedes all previous lists)*

Agencies accredited by the Board of Review of the American Lumber Standard Committee, Incorporated and typical quality marks.

### Interpreting a Quality Mark

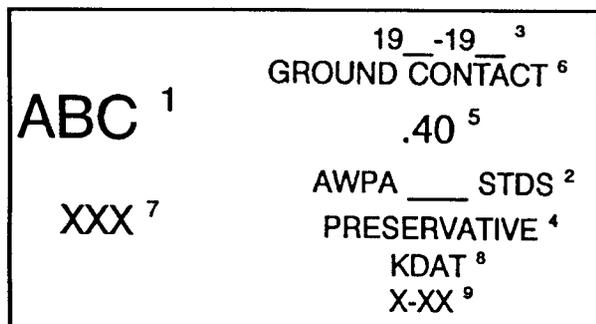

- 1 - The identifying symbol, logo or name of the accredited agency.
- 2 - The applicable American Wood Preservers' Association (AWPA) commodity standard.
- 3 - The year of treatment if required by AWPA standard.
- 4 - The preservative used, which may be abbreviated.
- 5 - The preservative retention.
- 6 - The exposure category (e.g. Above Ground, Ground Contact, etc.).
- 7 - The company name and location of home office; or company name and number; or company number.
- 8 - If applicable, moisture content after treatment.
- 9 - If applicable, length, and/or class.

As specified below for particular agencies, some or all of the following American Wood Preservers' Association commodity standards are used by American Lumber Standard Committee, Incorporated accredited agencies which supervise facilities which pressure treat wood products:

- C1 All Timber Products--Preservative Treatment by Pressure Processes
- C2 Lumber, Timbers, Bridge Ties and Mine Ties--Preservative Treatment by Pressure Processes
- C3 Piles--Preservative Treatment by Pressure Processes
- C4 Poles--Preservative Treatment by Pressure Processes
- C5 Fence Posts--Preservative Treatment by Pressure Processes
- C6 Crossties and Switch Ties--Preservative Treatment by Pressure Process
- C9 Plywood--Preservative Treatment by Pressure Processes
- C15 Wood for Commercial-Residential Construction--Preservative Treatment by Pressure Processes
- C17 Playground Equipment Treated with Inorganic Preservatives--Preservative Treatment by Pressure Processes
- C18 Standard for Pressure Treated Material in Marine Construction
- C22 Lumber and Plywood for Permanent Wood Foundations--Preservative Treatment by Pressure Processes
- C23 Round Poles and Posts used in Building Construction--Preservative Treatment by Pressure Processes
- C24 Sawn Timber Piles Used for Residential and Commercial Building
- C25 Sawn Crossarms--Preservative Treatment by Pressure Process
- C28 Standard for Preservative Treatment of Structural Glued Laminated Members and Laminations Before Gluing of Southern Pine, Pacific Coast Douglas Fir, Hemfir and Western Hemlock by Pressure Processes
- C31 Lumber Used Out of Contact With the Ground and Continuously Protected from Liquid Water--Treatment by Pressure Processes
- C33 Standard for Preservative Treatment of Structural Composite Lumber by Pressure Processes
- C34 Shakes and Shingles--Preservative Treatment by Pressure Processes

## TABLE OF STANDARDS, BY AGENCY

	BODE INSPECTION	CLIS	CSI	FLIS	McCUTCHAN INSPECTION	NSLB	PFS	SPIB	TIMBER PRODUCTS
C1	X	X	X	X	X	X	X	X	X
C2	X	X	X	X	X	X	X	X	X
C3	X	X	X	X	X		X	X	X
C4			X					X	
C5	X	X	X	X	X	X	X	X	X
C6			X					X	
C9	X	X	X	X	X	X	X	X	X
C15	X	X	X	X	X		X	X	X
C17	X	X	X	X	X		X	X	X
C18	X	X	X	X	X		X	X	X
C22	X	X	X	X	X	X	X	X	X
C23	X	X	X	X	X		X	X	X
C24	X	X	X	X	X	X	X	X	X
C25								X	
C28	X	X	X	X	X		X	X	X
C31			X					X	X
C33									X
C34				X					X

### KEY TO THE FOLLOWING TABLES

As specified in the following tables, some or all of the following preservatives are used:

CCA	- chromated copper arsenate
ACA	- ammoniacal copper arsenate
ACZA	- ammoniacal copper zinc arsenate
ACC	- acid copper chromate
ACQ	- ammoniacal copper quat.
COPPER NAP	- copper naphthenate
PENTA	- pentachlorophenol
CREOSOTE	- creosote and/or solutions
BORATE	- borates
CBA-A	- copper azole - A
CC	- ammoniacal copper citrate
CDDC	- copper bis (dimethyldithiocarbamate)

1	- sawn material and plywood
2	- plywood only
3	- sawn material only
R	- round commodities
SP	- southern pine
RP	- red pine
PP	- ponderosa pine
HF	- hem-fir
DF	- coastal Douglas fir
LP	- lodgepole pine
WH	- western hemlock
RDP	- radiata pine
CP	- caribbean pine
EWP	- eastern white pine
JP	- jack pine

**ACCREDITED AGENCY  
AND ADDRESSES**

**TYPICAL QUALITY MARK**

**TABLE OF COMMODITIES,  
BY SPECIES & PRESERVATIVE**  
(See Key)

**Bode Inspection**  
P.O. Box 307  
Beaverton, Oregon 97075-0307  
503-590-3555  
Fax: 503-590-2802

LP-22                      AWPA  
.40 RETENTION            C2/C9  
GROUND CONTACT  
CCA-C  
DRY  
**.40**                      XYZ TREATING  
BEAVERTON, OR  
93-94



	HF	DF	WH
CCA	1	2,R	R
ACA	1	1,R	R
ACZA	1	1,R	R
ACC	1	2,R	R
ACQ	1	1	
COPPER NAP	1	1,R	R
PENTA	1	1,R	R
CREOSOTE	1	1,R	R

**California Lumber Inspection Service**

P.O.Box 6989  
San Jose, CA. 95150  
408-993-1633  
Fax: 408-993-1642

1993                      CCA-C                      1994  
                      GROUND CONTACT  
LP-22 RET. .40  
AWPA C2 & C9  
CDE WOOD TREATING INC.  
INDUSTRY, CA.

	SP	RP	PP	HF	DF	LP	WH
CCA	1,R	1,R	1,R	1	2,R	R	R
ACA	1,R	1,R	1,R	1	1,R	1,R	1,R
ACZA	1,R	1,R	1,R	1	1,R	1,R	1,R
ACC	1,R	1,R	1,R	1	2,R	1,R	1,R
COPPER NAP	1,R	1,R	1,R	1	1,R	1,R	1,R
PENTA	1,R	1,R	1,R	1	1,R	1,R	1,R
CREOSOTE	1,R	1,R	1,R	1	1,R	1,R	1,R

California Lumber Inspection Service maintains a laboratory accredited for the analysis of wood samples pressure treated with the following preservative(s):  
CCA, ACA, ACZA, ACC and COPPER NAP.

**Canadian Softwood Inspection, Inc.**

22089 28<sup>th</sup> Avenue  
Langley, BC V2Z 1P1 Canada  
604-532-7624  
Fax: 604-532-7625

                      CCA-C  
AWPA C2 / C9  
.40 RET  
LP - 22  
GROUND CONTACT  
NAME OF TREATMENT FACILITY  
97                      LOCATION                      96

	SP	RP	PP	HF	DF	LP	WH	JP
CCA	1,R	1,R	1,R	1	1,R	1,R	1,R	1,R
BORATE	1-All AWPA Applicable Species							

**Florida Lumber Inspection Service**

P. O. Box 1363  
Perry, Florida 32347  
850-584-5221  
Fax: 850-584-8103  
flis@perry.gulfnet.com

AWPA                      1998 - 1999                        
C2/C9                      CCA-C  
STDS                      ABOVE  
.25                      GROUND  
PLANT NAME / LOCATION (S)  
OR PLANT NO.

	SP	RP	PP	RDP	CP
CCA	1,R	1,R	1,R	1,R	1,R
COPPER NAP	1,R	1,R	1,R	1,R	1,R
PENTA	1,R	1,R	1,R	1,R	1,R
CREOSOTE	1,R	1,R	1,R	1,R	1,R

Florida Lumber Inspection Service maintains a laboratory accredited for the analysis of wood samples pressure treated with the following preservative(s):  
CCA.

**McCutchan Inspection, Inc.**

P.O.Box 397  
Banks, OR 97106  
503-324-5210  
Fax: 503-324-7912

AWPA C-2                      CCA-C.25  
LP-2                      ABOVE                      93  
GROUND                      McC  
ABC TREATING  
PORTLAND, OREGON

	SP	RP	PP	HF	DF
CCA	1,R	1,R	1	1	1,R
ACA	1,R	1,R	1	1	1,R
ACZA	1,R	1,R	1	1	1,R
ACC	1,R	1,R	1	1	1,R
COPPER NAP	1,R	1,R	1	1	1,R
PENTA	1,R	1,R	1	1	1,R
CREOSOTE	1,R	1,R	1	1	1,R

**ACCREDITED AGENCY  
AND ADDRESSES**

**Northern Softwood  
Lumber Bureau**  
272 Tuttle Road  
P.O. Box 87A  
Cumberland Center, Maine 04021  
207-829-6901  
Fax: 207-829-4293

**TYPICAL QUALITY MARK**

1999	GROUND	2000
QUALITY	CONTACT	
		AWPA C2, C9 STDS
CONTROL	CCA-C .40	
<b>ABC LUMBER CO. CUMBERLAND, ME</b>		

**TABLE OF COMMODITIES,  
BY SPECIES & PRESERVATIVE**

(See Key)

	SP	RP	PP	EWP
CCA	1	1	1	1
ACZA	1	1	1	1

**PFS Corporation**  
2402 Daniels Street  
Madison, Wisconsin 53718  
608-221-3361  
Fax: 608-221-0180

	CCA-C FDN DRY .60 AWPA C-22
NAME OF PRESERVING COMPANY City, State or Mill#	

	SP	RP	PP	HF	DF	LP	WH
CCA	1,R	1,R	1,R	1	2,R	R	R
ACA	1,R	1,R	1,R	1	1,R	R	R
ACZA	1,R	1,R	1,R	1	1,R	R	R
ACC	1,R	1,R	1,R	1	2,R	R	R
CREOSOTE	1,R	1,R	1,R	1	1,R	R	R

**Southern Pine Inspection Bureau**  
4555 Spanish Trail  
Pensacola, Florida 32504  
850-434-5011  
Fax: 850-434-5388

1993	ABOVE	1994
QUALITY	GROUND	
		AWPA C2, C9 STDS
CONTROL	CCA-C .25	
<b>ABC LUMBER CO. PENSACOLA, FLORIDA</b>		

ALL AWPA APPLICABLE SPECIES	
CCA	1,R
PENTA	R
CREOSOTE	R
ACQ	1

Southern Pine Inspection Bureau maintains a laboratory accredited for the analysis of wood samples pressure treated with the following preservative(s): CCA, ACZA, PENTA, CRESOTE, and ACQ.

**Timber Products Inspection**  
P. O. Box 919  
Conyers, Georgia 30012  
770-922-8000  
Fax: 770-922-1290

TP.	93 CCA-C 94	TP.
	ABOVE	
	GROUND	
	AWPA C2/C9 .25	
PLANT NAME / LOCATION OR PLANT NO.		

	ALL AWPA APPLICABLE SPECIES
CCA	1,R
ACA	1,R
ACZA	1,R
ACC	1,R
ACQ	1,R
COPPER NAP	1,R
PENTA	1,R
CREOSOTE	1,R
BORATE	1
CBA-A	3
CC	1, R
CDDC	3

Timber Products Inspection maintains a laboratory accredited for the analysis of wood samples pressure treated with the following preservative(s): CCA, ACA, ACZA, ACC, ACQ, COPPER NAP, PENTA, CREOSOTE, BORATE, CBA-A, CC and CDDC.